

Smart Control 5“

Safety instructions



Electrical devices may only be mounted and connected by electrically skilled persons.

Serious injuries, fire or property damage possible. Please read and follow manual fully.

Danger of electric shock. Always disconnect before carrying out work on the device or load.

These instructions are an integral part of the product, and must remain with the end customer.

Structure of the device

See figure 1

- (1) Mounting screws
- (2) Supporting frame
- (3) Mounting hooks
- (4) Smart Control
- (5) Locking screws
- (6) LAN/PoE

Function

Intended purpose

- Operation and visualisation of system statuses and information on building automation
- Installation vertical
- Installation in appliance box according to DIN 49073

Product characteristics

- High performance HD screen, 720 x 1280
- Proximity sensor
- Ambient light sensor
- Door call function only in combination with Siedle Smart Gateway SG 650-.. or SG 150-..
- KNX visualisation in combination with Visu Pro Server (ref.-no.: JVP-SERVER-H)
- KNX visualization in combination with Smart Visu Server (ref.-no.: SV-SERVER-INT)
- eNet visualisation in combination with eNet server (ref.-no.: ENET-SERVER) with software version 2.0 or higher
- Capacitive touchscreen
- Graphical user interface

Information for electrically skilled persons

Installation and electrical connection



DANGER
Electric shock from touching live parts in the installation environment.
An electric shock can be fatal.
Before working on the device, disconnect the power and cover live parts in the area.

Ensure correct orientation when installing the appliance box. Mounting screws (1) must be in vertical alignment.

- Mount supporting frame (2) in vertical orientation on the appliance box, mounting hooks (3) in front.
 - Release locking screws (5).
 - Connect LAN (PoE).
 - Connect optional power supply.
 - Place Smart Control (4) flush on supporting frame.
- Adapt mounting hooks carefully in the provided notches in Smart Control.
- Tighten locking screws (fig. 3).

Bediening

Sidebar – Overzicht menustructuur

- Deurintercom (app)
- eNet Smart Home (app)
- JUNG Visu Pro Server (app)
- JUNG Smart Visu Server (app)
- Instellingen
 - Algemene instellingen
 - Netwerkconfiguratie
 - App-Autostart
 - Systeemupdate

App-Autostart selecteren

Na aansluiting van het apparaat verschijnt een app-overzicht waarin de app-Autostart kan worden geselecteerd.

- App-Autostart selecteren.
De app wordt automatisch gestart na onderbrekingen van de voedingsspanning, firmwareupdates of deurintercomfunctie van Siedle.

Sidebar openen

- Veegbeweging maken van de rechterrand van het touchscreen naar het midden.
Sidebar wordt geopend.

App handmatig starten

- Sidebar openen.
- App selecteren.
App start.

App-Autostart wijzigen

- Sidebar openen.
- Menu „Instellingen“ selecteren.
- Submenu „App-Autostart“ selecteren.
App-overzicht verschijnt.
- App-Autostart selecteren.
App-Autostart is gewijzigd.

Firmware actualiseren

Voorwaarde: internetverbinding

- Sidebar openen.
- Menu „Instellingen“ selecteren.
- Submenu „Systeemupdate“ selecteren.
Firmware wordt geactualiseerd.

Technische specificaties

Nominale spanning DC 24 V SELV +/-10%
 Nominaal vermogen < 1,5 W
 Omgevingstemperatuur 0 ... +30 °C
 Voedingsspanning
 PoE (Power over Ethernet):
 IEEE 802.3af apparaat van klasse 3 via LAN of
 24 V DC via externe netadapter (niet meegeleverd)

Toebehoren

Netadapter Art.nr.: NT 2415 REG VDC
 NT 2405 VDC

Garantie

Wij bieden garantie in het kader van de wettelijke bepalingen via speciaalzaken.

Smart Control 5“

Art.nr.: SC 5 SW

Bedieningshandleiding

NL

ALBRECHT JUNG GMBH & CO. KG

Volmestraße 1
 58579 Schalksmühle
 GERMANY
 Tel. +49 2355 806-0
 Fax +49 2355 806-204
 kundencenter@jung.de
 www.jung.de

05/2018
 0024020100

