




DC311XXP2/BS
DC313XXP2/BS

Contents **DE** Inhalt **FR** Contenu **UK** Inhoud **FI** Sisältö
UK Inhold **IT** Contenuto **ES** Contenido **PT** Conteúdo
GR Περιεχόμενα **SE** Innehåll



x1

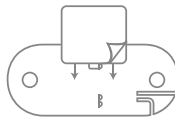

x1




x2










CR2032





x1

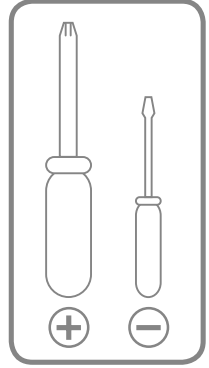


Getting started **DE** Erste Schritte **FR** Démarrage **UK** Aan de slag **FI** Aloitusopas **UK** Kom i gang
IT Operazioni preliminari **ES** Para empezar **PT** Para começar **GR** Πρώτα βήματα **SE** Kom igång

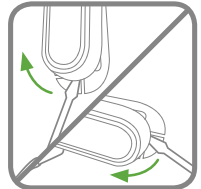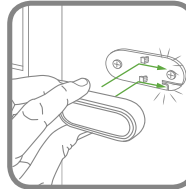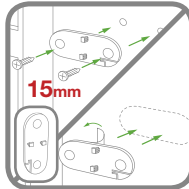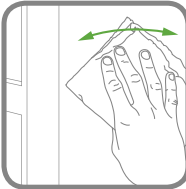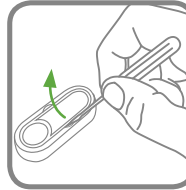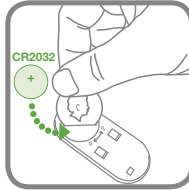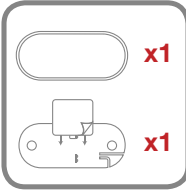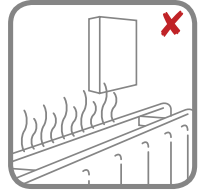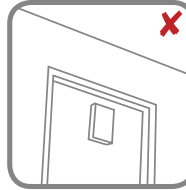




- DE Optional features
- FR Options disponibles
- IT Valmiraiset ominaisuudet
- UK Valgírre funktíoner
- ES Opciones disponibles
- PT Προαιρετικές λειτουργίες πρόσθετων
- DE Mòjiljga funktíoner

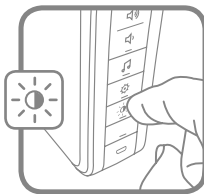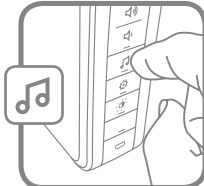

	Hello	Ding Dong	Westminster	Marimba	Piano	Bell	Telephone	Soft Alert
	•	•					•	•
	•	•	•	•			•	•
	•	•	•	•	•	•	•	•

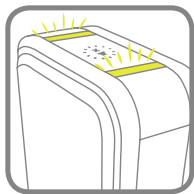

- DE Linking
- FR Einlernen
- IT Programmation
- UK Verknüpfung
- ES Linkittämínen
- PT Forbínde
- IT Collegamento
- ES Enlache
- PT Programação
- DE Ünwbéon
- SE Lánkíng

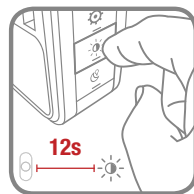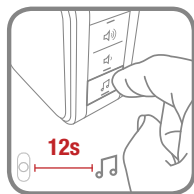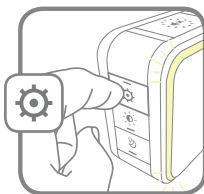

- DE Trouble shooting
- DE Fehlerbehebung
- FR Dépannage
- UK Probleemoplossing
- FI Vianmääritys
- UK Problemløsning
- IT Risoluzione die problemi
- ES Solución de problemas
- PT Resolução de problemas
- GR Αντιμετώπιση προβλημάτων
- SE Felsökning

livewell.honeywell.com

